

Octagon Setup Instructions

We recommend you setup and test the machine prior to your first event to ensure a smooth operation.

Setting Up

1. Locate a power source within reach. Mark the circuit breaker so it will not be turned off accidentally. If outdoors make sure any electrical connection points are above water level to prevent shorting out the electrical system in case of heavy rain.
2. Unpack the Octagon from its storage bag. Remove the eight aluminum poles from the carry bag. Four poles will have a plastic connector attached.
3. Place the base of the Octagon in the best viewing position. The front is opposite the blower sleeve.
4. Connect the four poles with connectors to the base of the machine. Connect the four remaining poles to the connectors and roof. Make sure each plastic connector is placed securely into the pole.
5. Connect the blower to the sleeve on the back of the machine. Both the sleeve and blower are installed with Velcro for easy connection.
6. Plug the blower's power cord into the timer. The outlet is located on the side of the timer. Set the dial on the front of the blower to the 3rd speed.
7. Plug the timer into the power source. Use the dial on the front of the timer to set the time. Once the time is set, push the start button to engage the blower.
8. Slightly crumple the play money or bills before placing them on the floor of the machine. Place no more than 150 bills inside the machine at a time.

For assistance, please contact Customer Service at 800.573.3111
or After-Hour Support at 800-361-7686.

Octagon Setup Instructions

We recommend you setup and test the machine prior to your first event to ensure a smooth operation.

Setting Up

1. Locate a power source within reach. Mark the circuit breaker so it will not be turned off accidentally. If outdoors make sure any electrical connection points are above water level to prevent shorting out the electrical system in case of heavy rain.
2. Unpack the Octagon from its storage bag. Remove the eight aluminum poles from the carry bag. Four poles will have a plastic connector attached.
3. Place the base of the Octagon in the best viewing position. The front is opposite the blower sleeve.
4. Connect the four poles with connectors to the base of the machine. Connect the four remaining poles to the connectors and roof. Make sure each plastic connector is placed securely into the pole.
5. Connect the blower to the sleeve on the back of the machine. Both the sleeve and blower are installed with Velcro for easy connection.
6. Plug the blower's power cord into the timer. The outlet is located on the side of the timer. Set the dial on the front of the blower to the 3rd speed.
7. Plug the timer into the power source. Use the dial on the front of the timer to set the time. Once the time is set, push the start button to engage the blower.
8. Slightly crumple the play money or bills before placing them on the floor of the machine. Place no more than 150 bills inside the machine at a time.

For assistance, please contact Customer Service at 800.573.3111
or After-Hour Support at 800-361-7686.